


# autarco

## Installation and Operation Manual

---

### Solar Inverters XLX-series

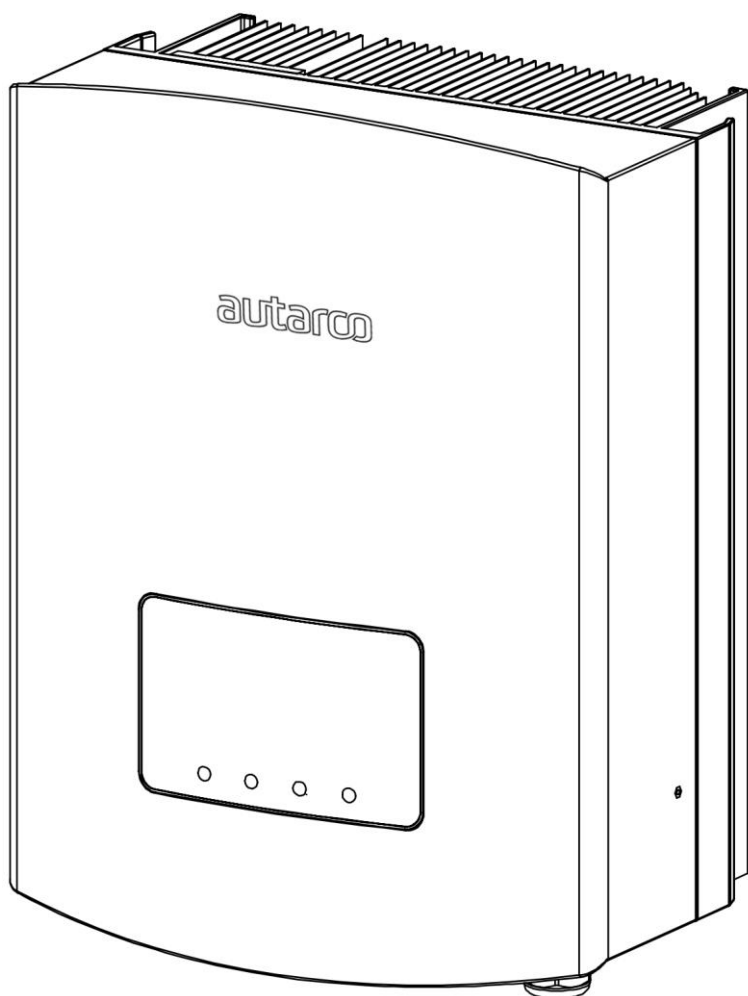

## **Contact Information**

Autarco Group B.V.  
Schansoord 60  
5469 DT Erp  
The Netherlands

[www.autarco.com](http://www.autarco.com)  
[info@autarco.com](mailto:info@autarco.com)

## **Other Information**

This manual is an integral part of the unit. Please read the manual carefully before installation, operation or maintenance. Keep this manual for future reference.

Product information is subject to change without notice. All trademarks are recognized as the property of their respective owners.

© Autarco Group B.V.  
All rights reserved.

**Table of Contents**

<b>1.</b>	<b>Introduction .....</b>	<b>4</b>
1.1	Read this first.....	4
1.2	Target Audience .....	4
1.3	Product versions covered by this document.....	5
<b>2.</b>	<b>Preparation .....</b>	<b>6</b>
2.1	Safety instructions.....	6
2.2	Package contents.....	7
2.3	Internal DC switch .....	7
2.4	Explanations of symbols on inverter .....	7
<b>3.</b>	<b>Product information .....</b>	<b>8</b>
3.1	Overview.....	8
3.2	Product identification.....	8
3.3	Product overview.....	9
<b>4.</b>	<b>Installation .....</b>	<b>10</b>
4.1	Safety.....	10
4.2	Mounting instructions .....	10
4.3	Safety clearance .....	11
4.4	Mounting procedure .....	12
<b>5.</b>	<b>Electrical installation .....</b>	<b>14</b>
5.1	AC connection.....	14
5.2	DC connections.....	16
5.3	Commissioning and Decommissioning sequence .....	17
<b>6.</b>	<b>Operation.....</b>	<b>18</b>
6.1	LED indicator lights .....	18
6.2	Inverter display.....	18
6.3	Information.....	19
6.4	Settings .....	20
6.5	Advanced info.....	20
6.6	Advanced Settings .....	21
<b>7.</b>	<b>Monitoring setup and system registration .....</b>	<b>22</b>
<b>8.</b>	<b>Maintenance .....</b>	<b>22</b>
<b>9.</b>	<b>Disposal .....</b>	<b>22</b>
<b>10.</b>	<b>Troubleshooting .....</b>	<b>23</b>
10.1	General .....	23
10.2	Internal component fault .....	23
10.3	Grid errors .....	24
10.4	System and design fault.....	25
<b>11.</b>	<b>Product specifications.....</b>	<b>26</b>

## 1. Introduction

### 1.1 Read this first

This manual contains important information for use during installation and maintenance of the XLX-series Autarco inverter.

To reduce the risk of electrical shock, and to ensure the safe installation and operation of the XLX-series Autarco inverters, the following safety symbols appear throughout this document to indicate dangerous conditions and important safety instructions.



**WARNING!** Indicates safety instruction, which if not correctly followed, can result in injury or property damages.



**RISK OF ELECTRIC SHOCK!** Indicates safety instructions, which if not correctly followed, could result in electric shock.



**HOT SURFACE!** Indicates safety instructions, which if not correctly followed, could result in burns.

### 1.2 Target Audience

This manual is intended for anyone who uses Autarco XLX-series inverter. Before any further action, the operators must first read all safety regulations and be aware of the potential danger to operate high-voltage devices. Operators must also have a complete understanding of this device's features and functions.



**ATTENTION!** Qualified personnel means a person with valid license from the local authority in:

- Installing electrical equipment and PV power systems (up to 1000 V).
- Applying all applicable installation codes and using Personal Protective Equipment.
- Analyzing and reducing the hazards involved in performing electrical work.



**WARNING!** Do not use this product unless it has been successfully installed by qualified personnel in accordance with the instructions in chapter 4 "Installation".

## 1.3 Product versions covered by this document

The main purpose of this user manual is to provide instructions and detailed procedures for installing, operating, maintaining, and troubleshooting the XLX-series of Autarco inverters which includes the following models:

For 380/400V AC grid connection:

- S2.XLX20000(S)
- S2.XLX25000(S)
- S2.XLX30000(S)
- S2.XLX30000-HE(S)

For 480V AC grid connection:

- S2.XLX36000-HV(S)

The “S2.” In the product code means the product is a grid-tied inverter. If the product has an “S” at the end it comes with integrated DC switches.

The item code or SKU will include an additional number at the end. The final number references the default grid standard and colour of inverter. For example, S2.XLX20000S.1 is the 20kW model with Dutch grid standard as default, integrated DC switch and Autarco blue cover.

Please keep this user manual available at all times in case of emergency.

## 2. Preparation

### 2.1 Safety instructions



**DANGER!** Do not touch any internal components whilst the inverter is in operation.



**DANGER!** Do not stand close to the inverter during severe weather conditions such as lightning, etc.



Make sure you completely cover the surface of all PV arrays with opaque (dark) material before wiring them or make sure the DC circuit breaker or equivalent DC isolator is disconnected. This is because photovoltaic (PV) arrays create electrical energy when exposed to light, and could cause a hazardous condition.



The XLX series inverter must only be operated with PV arrays of protection class II, in accordance with IEC 61730, class A.



**WARNING!** The PV inverter will become hot during operation; please don't touch the heat sink or peripheral surface during or shortly after operation.




**NOTICE!** Do not directly connect AC output of the inverter to any private AC equipment. The PV inverter is designed to feed AC power directly into the public utility power grid.



**WARNING!** The installation, service, recycling and disposal of the inverters must be performed by qualified personnel in compliance with national and local standards and regulations. Please contact your dealer to get the information of authorized repair facility for any maintenance or repairmen.

Any unauthorized actions including modification of product functionality of any form will affect the validation of warranty service; Autarco may deny the obligation of warranty service accordingly.

## 2.2 Package contents

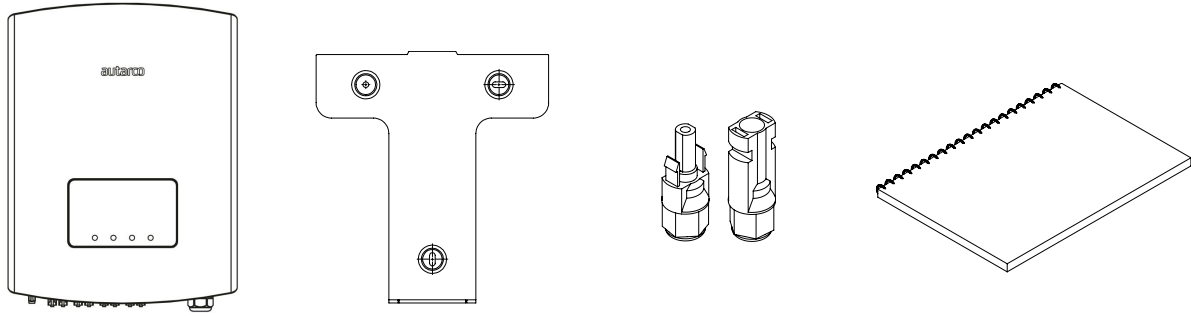

Autarco XLX-series inverter

Mounting bracket  
Incl. screws

MC4 connector pairs  
S4.MC4F/MC4M

Instruction manual

## 2.3 Internal DC switch

Please verify whether your Autarco XLX-series inverter is equipped with an internal DC switch. If there is an internal DC switch the product code will end in an "S". The switch can be found on the bottom of the inverter (see **Error! Reference source not found.**). If there isn't an internal DC switch it is important to apply an external C disconnecter in order to completely disconnect the solar PV module strings from the inverter.

## 2.4 Explanations of symbols on inverter



### DANGER - HIGH ELECTRIC VOLTAGE

This device is directly connector to public grid. All work to the inverter shall be carried out by qualified personnel only. There might be residual currents in inverter for up to 10 minutes because of large capacitors.



### ATTENTION

This device directly connected to electricity DC generators and the public AC grid.



### DANGER – HOT SURFACES

The components inside the inverter will get hot during operation, DO NOT touch aluminum housing during operating.



### ATTENTION

In case of any work to the inverter, always refer to this manual for detailed product information.



### ATTENTION

This device SHALL NOT be disposed of in residential waste. Please go to Chapter 9 "Recycling and Disposal" for proper treatments.



### CE MARK

This equipment conforms to the basic requirements of the EU guideline governing low voltage and electromagnetic compatibility.

## 3. Product information

### 3.1 Overview

Autarco XLX-series grid tied inverters are state of the art, high efficiency, robust and reliable grid tied inverters at the best price quality ratio available. They are easy to install and carry a standard 10 year product warranty. Our rigorous quality control and testing facilities guarantee Autarco inverters meet the highest quality standards possible. These inverters are the key to our international track record of delivering extremely reliable solar power solutions.

Key features:

- Maximum efficiency of 98.4%
- 7" LCD colour display
- 4 MPPT with wide voltage range
- Low turn off voltage
- High enclosure protection class IP65
- Silent design using convection cooling principle
- Standard ten year product warranty
- Standard with wireless monitoring
- Optional integrated DC switch
- High range of protective functions




For full specifications please see chapter 11 "Product specifications".

### 3.2 Product identification

You can identify the inverter by the serial number (S/N) sticker on the side of the inverter. Important electrical specification can also be found on the label which can be found on the right side of the inverter housing. Do not remove the label or the serial number as this voids the product warranty.



### 3.3 Product overview

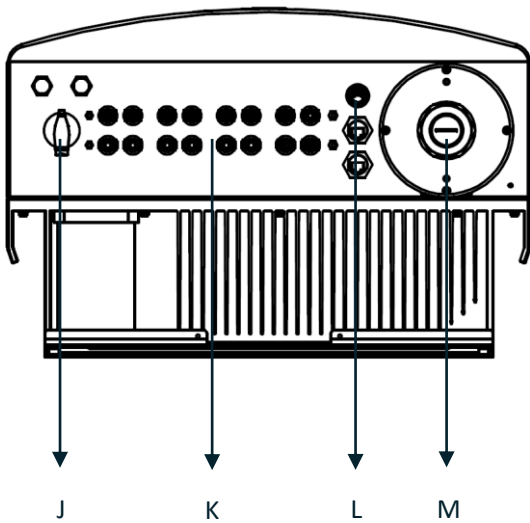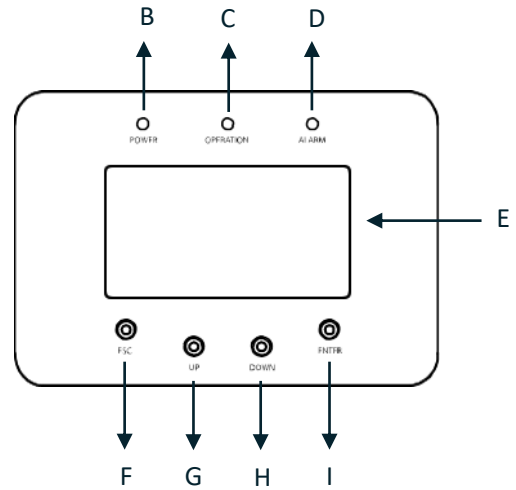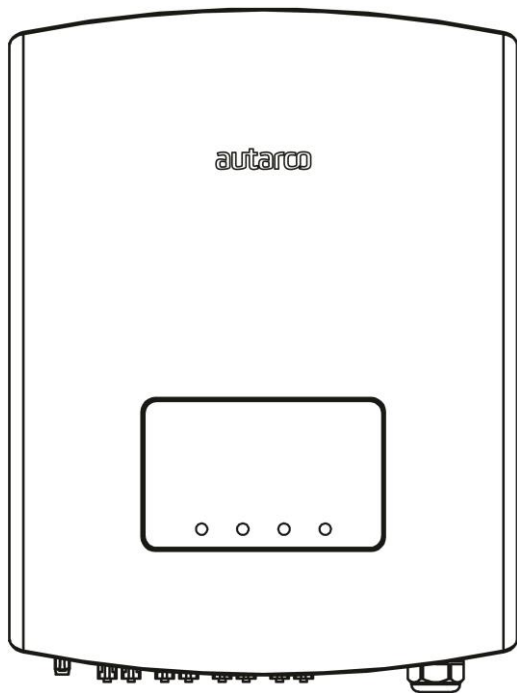

- A: Inverter cover
- B: LED light – POWER
- C: LED light – OPERATION
- D: LED light – ALARM
- E: Display
- F: Escape key
- G: Up key
- H: Down key
- I: Enter key
- J: DC switch (optional)
- K: DC inputs
- L: Communication port
- M: AC output

## 4. Installation

### 4.1 Safety



**DANGER!** Do not install the inverter near flammable or explosive items.




**WARNING!** The installation must be performed by qualified personnel and in compliance with national and local standards and regulations.  
This inverter will be connected to a high voltage DC power generator and AC grid. Inappropriate installation may also jeopardize the life span of the inverter.



The installation site must have good ventilation conditions. Direct exposure to intense sunshine is not recommended.

### 4.2 Mounting instructions

- The inverter is suitable for outdoor and indoor installation.
- Vertical installation is recommended, with a maximum inclination of 15° backwards.
- Make sure the mounting wall is strong enough to hold the weight of the inverter.
- The ambient temperature of installation site should be between -20 °C and +60 °C.
- It is not recommended that the inverter is exposed to the direct sunshine.
- Make sure of ample ventilation at installation site, insufficient ventilation may reduce the performance of the electronic components inside the inverter and shorten the life span of the inverter.

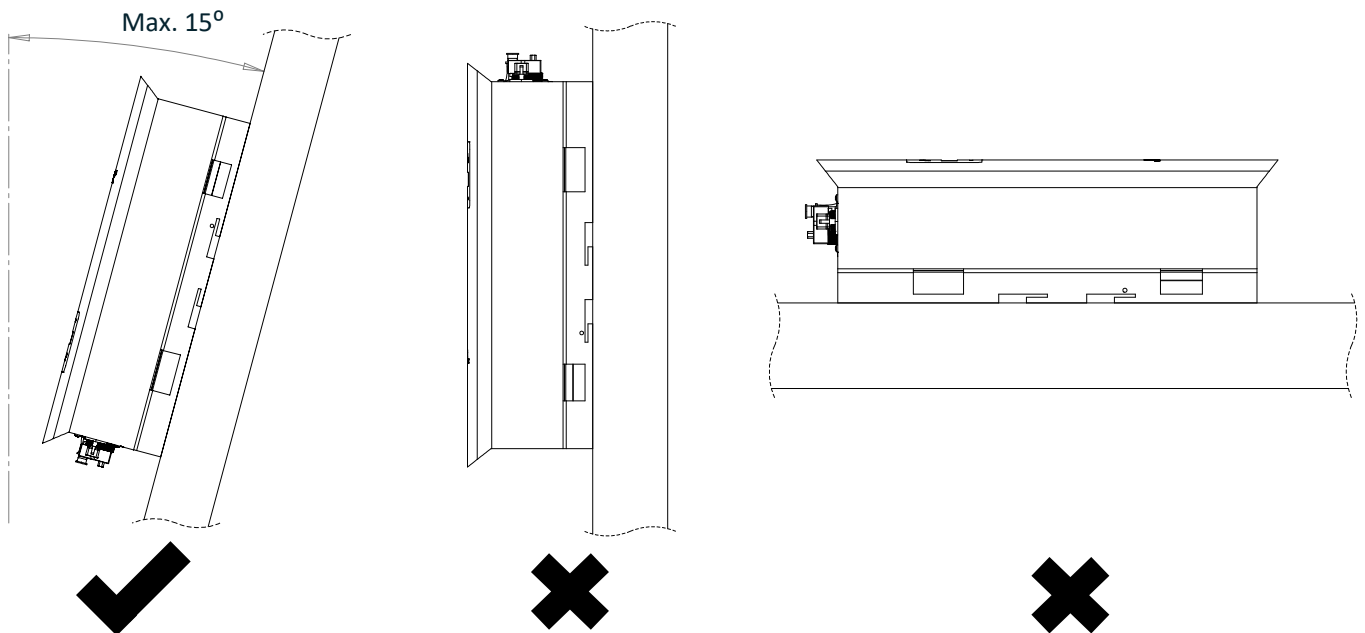


### 4.3 Safety clearance




Caution! Make sure heat sinks are out of reach of children.

Observe the following minimum clearances to walls:

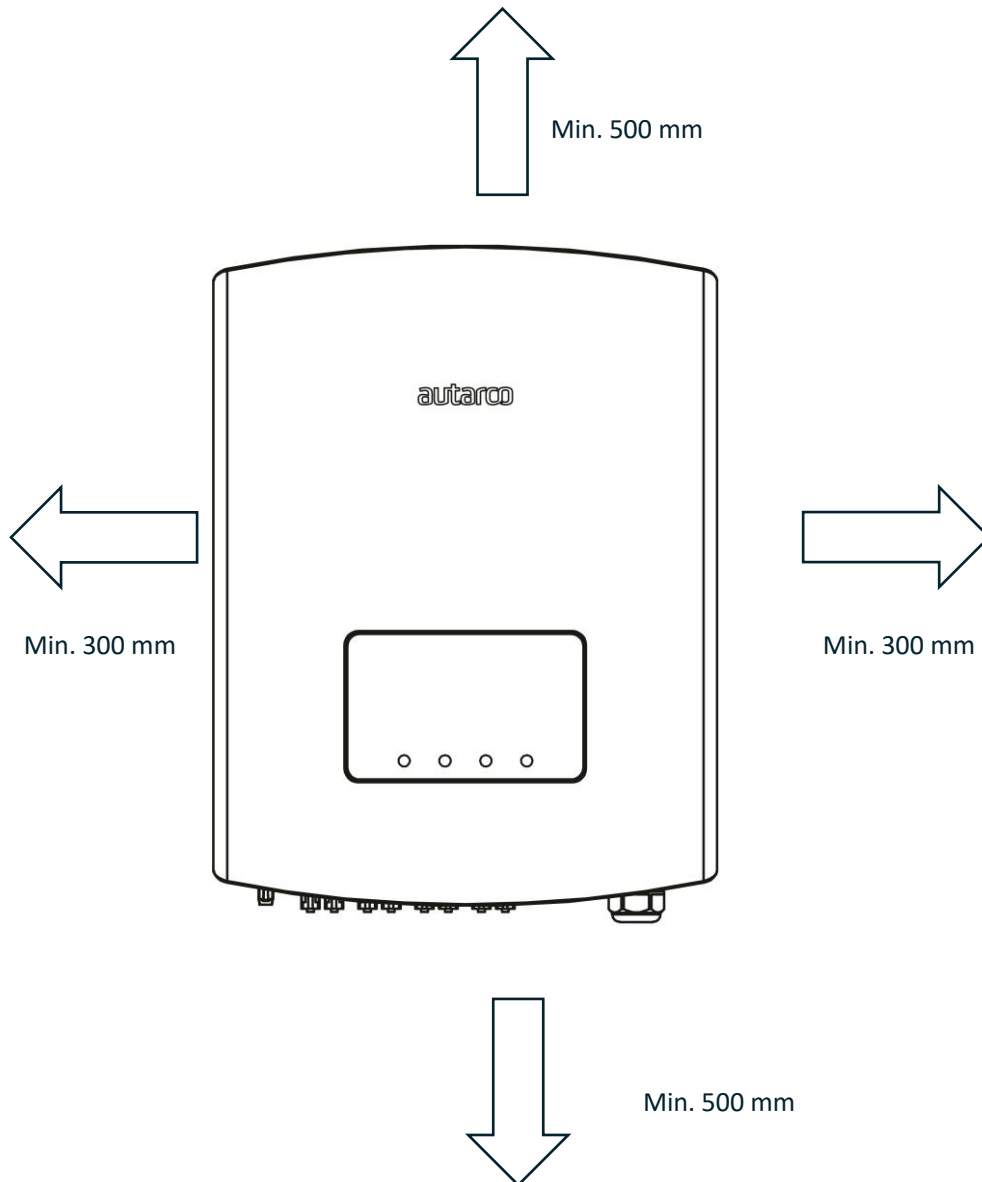


## 4.4 Mounting procedure


**Step 1** — The wall bracket has the dimensions below. Please ensure the positions of the holes are suitable for fitting expansion bolts.

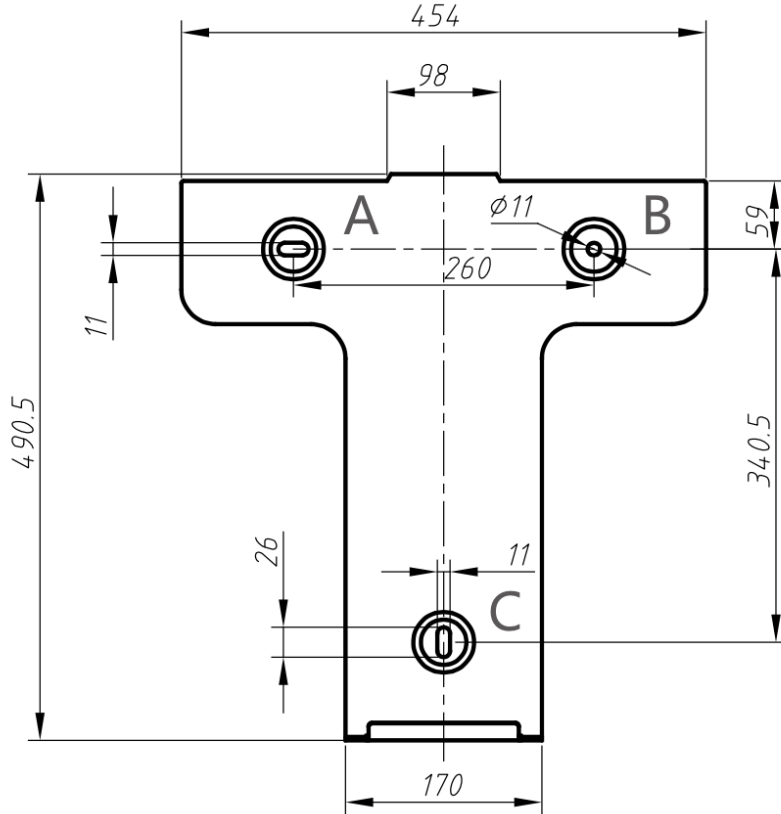


**Step 2** — Mount the wall bracket onto the mounting wall with appropriate screws plugs.

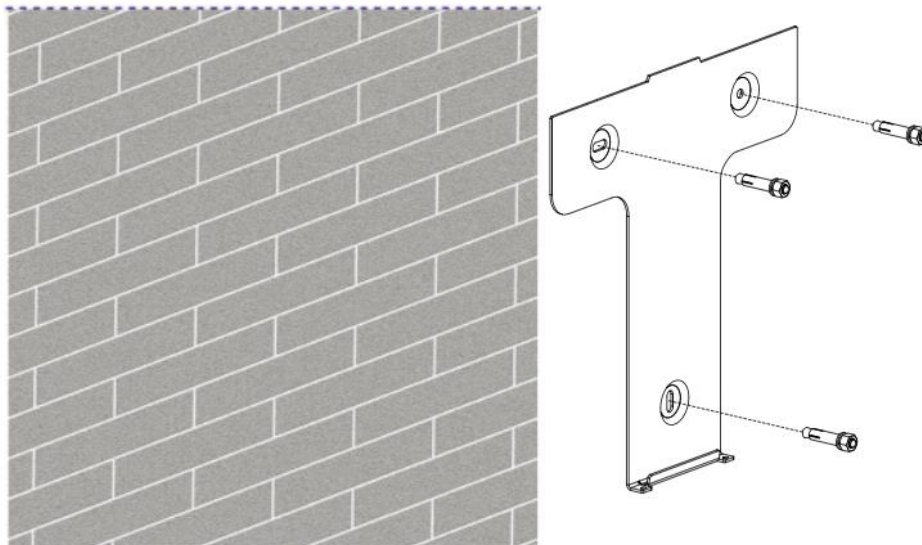

**Step 3** — Lower the inverter onto the bracket. Lower the inverter onto the bracket. The screw holes in the wall bracket should align with the raised convex on the inverter bracket.

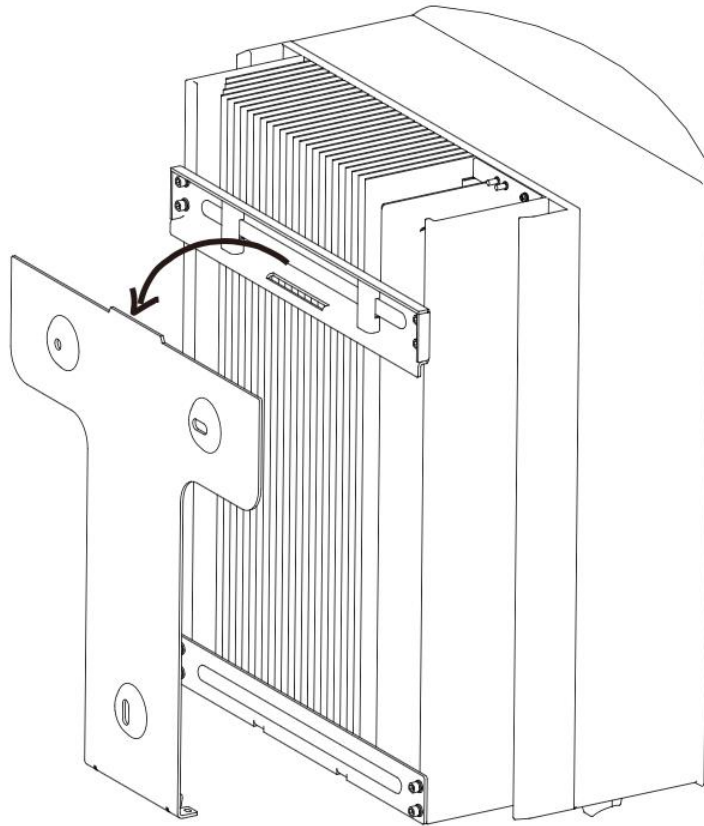

**Step 4** — Fix the bottom of the inverter to the wall bracket with the M4x9mm screws:

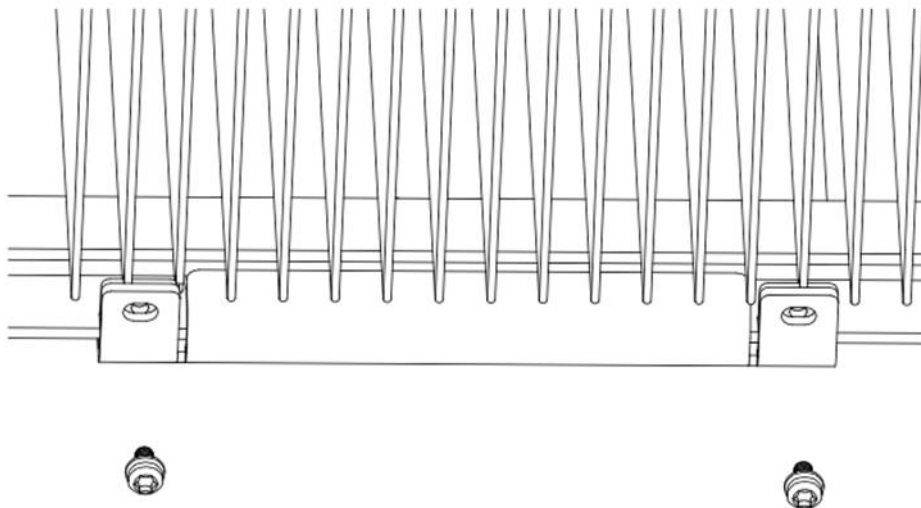

## 5. Electrical installation



**DANGER!** This inverter will be connected to a high voltage DC power generator and AC grid. The installation must be performed by qualified personnel and in compliance with national and local standards and regulations

### 5.1 AC connection



**DANGER!** Never connect or disconnect the connectors under load.



**NOTICE!** The AC connection to the electrical distribution grid must be performed only after receiving authorization from the utility that operates the grid.



**NOTICE!** Make sure to set the correct grid standard as part of system commissioning, see chapter 6.6.

The Autarco inverter is equipped with an integrated Residual Current Protective Device (RCPD) and Residual Current Operated Monitor (RCOM). The RCOM will detect the volume of the leakage current and compare it with the expected value, if the leakage current exceeds the permitted range, the RCPD will disconnect the inverter from the AC load.

If regulations in the country of installation stipulate an external Residual Current Device (RCD), you must use a device with a tripping threshold of 100 mA or more. A type "A" RCD can be used in accordance with our **"Manufacturer's declaration for usage of residual current devices with Autarco SX, MX, LX and XLX grid-tied inverters."**

The AC cable used must be dimensioned in accordance with any local and national directives on cable dimensions which specify requirements for the minimum conductor cross-section. Cable dimensioning factors are e.g.: nominal AC current, type of cable, type of routing, cable bundling, ambient temperature and maximum specified line losses.

We recommend 10-35mm 105°C cable with resistance lower than 1.5 ohm. If cable is longer than 100m, we recommend to use 16-35mm cable.

**Step 1** — Unscrew the 4 screws on the AC wiring box cover and pull out the wiring box.



**Step 2** — Insert the cable into the terminal and use a M6 hexagon screwdriver to tighten the screws. The torque is 10 Nm.



**WARNING!** Please do not put the insulating layer of the cable in to the terminal when tightening the screw, otherwise it will cause poor contact.

**Step 3** — Push the AC terminal along the rail to the inside of the inverter, and then tighten the 4 screws.





**NOTICE!** It is important that the AC wires are connected to the right terminals as indicated by the “L”, “N” and “Earthing” symbols on each AC connector.

In some countries a second protective conductor is required as a matter of principle. In each case, observe the applicable regulations for the site.



The AC connection to the electrical distribution grid must be performed only after receiving authorization from the utility that operates the grid.

Always use separate fuses for consumer load. Use dedicated circuit breakers with load switch functionality for load switching.

The selection of the mains circuit breaker rating depends on the wiring design (wire cross-section area), cable type, wiring method, ambient temperature, inverter current rating etc. Derating of the circuit breaker rating may be necessary due to self-heating or if exposed to heat.

	S2.XLX20000(S)	S2.XLX25000(S)	S2.XLX30000(S)	S2.XLX36000-HV(S)
Max. AC current (A)	31.57	39.71	47.63	47.63
Recommended fuse type gL/gG or comparable automatic circuit breaker rating (A)	40	63	63	63



**DANGER!** No consumer load should be applied between the mains circuit breaker and the inverter.

## 5.2 DC connections



**DANGER!** Never connect or disconnect the connectors under load.

XLX-series inverters have two MPP trackers. The DC characteristics of each model is shown in the table below:

Inverter	MPP tracker	Max DC power	Max DC voltage	Max. DC current per MPPT
S2.XLX20000(S)	4	24kW	1000V	18A
S2.XLX25000(S)		30kW		
S2.XLX30000(S)		36kW		
S2.XLX36000-HV(S)		43.2kW		





**DANGER!** Do not connect the strings with an open circuit voltage greater than the Max DC voltage of the inverter.

To connect the PV generator to the inverters we use 4mm<sup>2</sup> or 6mm<sup>2</sup> PV cable and MC4 connectors. For details on how to assemble MC4 connector please refer our MC4 connector manual.



**DANGER!** For protection against electric shock, MC4 connectors must be isolated from the PV array while being assembled or disassembled.



DC connections must not be unplugged while under load. They can be placed in a no-load state by switching off the DC/AC converter or breaking the DC circuit interrupter. Plugging and unplugging while under voltage is permitted.



**CAUTION!** MC4 connectors are watertight IP67 but cannot be used permanently under water. Do not lay the MC4 connectors on the roof surface.



If any tools or parts are used in the MC4 connector assembly other than those listed in the MC4 connector manual, neither safety nor compliance with the technical data can be guaranteed.

### 5.3 Commissioning and Decommissioning sequence

Turn ON	Turn OFF
1. Connect AC side (if not connected yet)	1. Switch OFF the AC switch
2. Connect DC side (if not connected yet)	2. Switch OFF the DC switch
3. Switch ON the DC switch	
4. Switch ON the AC switch	

If the voltage of PV is higher than the start-up voltage, the inverter will turn on and the initial interface of LCD will show “Current status: Waiting” on the upper left corner.

Then the inverter will check both its internal parameters and the parameters if the AC and DC input to ensure that they are within the acceptable limits.

After around 30-180 seconds (based on local requirement), the inverter will start to generate power. The green LED will be on continually and the LCD displays “Current status: Generating”.



**NOTICE!** If torn on DC input switch before grid breaker, inverter may show fault messages “No\_Grid” on current status, the fault will be clear if grid voltage is normal.

## 6. Operation

### 6.1 LED indicator lights

There are three LED status indicator lights in the front panel of XLX series inverters. The left POWER light (red) indicates power status of the inverter. The middle OPERATION light (green) indicates the operation status. The right ALARM light (yellow) indicates the alarm status. Table 3.1 explains their meanings.

Light	Status	Description
● POWER (red)	ON	The PV array provides power to the inverter
	OFF	The PV array does not provide power to the inverter
● OPERATION (green)	ON	The inverter is feeding AC power to the grid
	OFF	The inverter is not feeding AC power to the grid
	FLASHING	The inverter is initializing
● ALARM (yellow)	ON	There is a fault. Refer to the inverter display and chapter 10 of this manual for details
	OFF	The inverter is operation normally

When inverter DC switch and AC switch have been turned on the inverter will start initializing. After approx. 3 minutes the inverter will start normal operation with the inverter display showing GENERATING.

### 6.2 Inverter display



NOTICE! During normal operation, make sure the optional integrated DC switch is switched “on”.

The XLX series inverters come with a 7” LCD screen with graphic displays and interactive menus. Pressing the ENTER button gives access to the main menu which has four sub menus:

- Information, described in detail in chapter 6.3.
- Settings, described in detail in chapter 6.4.
- Advanced information, described in detail in chapter 6.5.
- Advanced settings, described in details in chapter 6.6.

By pressing UP or DOWN keys you can cycle through these sub menus and click ENTER to go into the submenu.

### 6.3 Information

The XLX series inverters main menu provides access to operational data and information. The information is displayed by selecting "Information" from the main menu. By default the inverter display will scroll through the information states below. Pressing the ENTER key will lock or unlock the current display. You can also press UP or DOWN keys to move to the next screen. By pressing the ESC key returns to the main menu.

Screen 1	
State	Description
V_DC1 V_DC2 V_DC3 V_DC4	Shows the DC input voltage (V) of the MPPT# (1 to 4)
I_DC1 I_DC2 I_DC3 I_DC4	Shows the DC input current (A) of the MPPT# (1 to 4)
V_A V_B V_C	Shows the AC voltage (V) of the grid for each phase
I_A I_B I_C	Shows the AC current (A) of the grid for each phase
Screen 2	
State	Description
Status:	Shows the status of the inverter  For any status other than "Generating" and "Initializing" please refer to chapter <b>Error! Reference source not found.</b> for trouble shooting
Total Energy: kwh	Shows total energy output (kWh)
This Year: kwh	Total energy output in this year (kWh)
Last Year: kwh	Total energy output of last year (kWh)
This Month: kwh	Total energy output in this month (kWh)
Last Month: kwh	Total energy output of last month (kWh)
Today: kwh	Total energy output in this day (kWh)
Yesterday: kwh	Total energy output of yesterday (kWh)
Inverter Serial Number	The serial number of this inverter
Frequency:	Shows the current frequency (Hz) of the grid
Carbon Offset:	Shows the amount of carbon emissions offset (ton)
Efficiency:	Shows the efficiency (%) of the inverter

## 6.4 Settings

The following options are available under the Settings submenu:

Set Time / Date	This function allows time and date setting
Set Address	This function is used to set the address of an inverter connected to a PC for communication purpose. The address number can be assigned from "01" to "99". The default address number of the inverter is "01"
Set Language	This function is used to set the language of inverter LCD display
Brightness	This function is used to set LCD screen brightness
Updater	This function is used to view the current system version

Press ENTER to enter the sub-menu and UP/DOWN to change the setting. Press ENTER to save or move to the next setting. Press the ESC key to cancel and return to the previous menu.

## 6.5 Advanced info



**WARNING!** Access to this section of the menu is for Autarco qualified and accredited technicians only. Unauthorized access will void the product and system warranty.

Screen can be scrolled through with UP/DOWN keys to see the information as per the table below. Press ENTER key to enter a submenu. Press ESC key to go back to the main menu.




Alarm Messages	Scroll through the last ten alarm messages for trouble shooting purposes.
Running Message	The screen shows the internal operation parameters of the inverter
Version	The screen shows the operating software version of the inverter
Communication data	The screen shows information interpretable to qualified technicians only
Daily Energy	The screen shows a graph of daily energy output
Monthly Energy	The screen shows a graph of the monthly energy output
Yearly Energy	The screen shows a graph of the yearly energy output
Totally Energy	The screen shows a graph of the inverter total energy detail
Daily records	The screen shows the inverter work log, the information is interpretable to qualified technicians only

## 6.6 Advanced Settings



WARNING! Access to this section of the menu is for Autarco qualified and accredited technicians only. Unauthorized access will void the product and system warranty.

Screen can be scrolled through with UP/DOWN keys to see the information as per the table below. Press ENTER key to enter a submenu. Press ESC key to go back to the main menu.

	 <p>WARNING! Set GRID OFF (see below) before changing this setting.</p> <p>Press UP/DOWN keys to cycle through available standards</p> <ul style="list-style-type: none"> <li>• AS4777</li> <li>• VDE4105</li> <li>• UL-1741</li> <li>• G59/3</li> <li>• CQC</li> <li>• User defined</li> </ul> <p>Press ENTER key to save the setting Press ESC key to cancel and return</p>
<p>Select grid standard</p>	<p>When selecting User defined the following upper and lower values have to be set for voltage and frequency:</p> <p>Press UP/DOWN keys to scroll through these values Press ENTER key to edit the selected value Press UP/DOWN keys to change the selected value Press ENTER key to save and return Press ESC key to cancel and return</p>  <p>WARNING! Set GRID ON (see below) before new standard is activated.</p>  <p>WARNING! Please note that the User-Def standard is not to be used without the agreement of the local grid authority.</p>
<p>Grid ON/OFF</p>	<p>This function is used to start or stop the generation of the inverter. Press UP/DOWN keys to cycle through grid ON/OFF options Press ENTER key to save Press ESC key to return</p>

Power Control	Activate and reactivate power can be set through power setting button
Remove power generation data and restore factory settings	Remove power generation data can reset the generating data of inverter, restore factory settings means all the settings are restored to default setting
Adjusting total generating data	The function allows the maintenance personnel to amend the total generating data of replacement inverter to the original one
Change Password	First enter the current password, press the DOWN key to move the cursor, press the UP key to revise the password figure.

## 7. Monitoring setup and system registration

The instructions about monitoring setup and system registration can be found in separate manuals enclosed in the documentation that came with this Autarco system. For more information manual please contact your Autarco installer or refer to our website [www.autarco.com](http://www.autarco.com).

## 8. Maintenance

The XLX-series inverters do not require regular maintenance. However, impurities such as dust and dirt accumulation on the heat sink may negatively affect the inverter's ability to dissipate heat. Any dirt or dust can be removed with a cloth or soft brush.



CAUTION! Do not touch the heat sink when the inverter is in operation. Turn OFF the inverter (see section 0) and allow for cooling down before cleaning.



CAUTION! Never use any solvents, abrasives or corrosive materials to clean the inverter.

## 9. Disposal

To comply with European Directive 2002/96/EC on waste Electrical and Electronic Equipment and its implementation as national law, electrical equipment that has reached the end of its life must be collected separately and returned to an approved recycling facility. Ignoring this EU Directive may have severe effects on the environment and your health.

## 10. Troubleshooting

### 10.1 General

Display message	Action
Blank screen	<ul style="list-style-type: none"> <li>• Check that all switches are in the ON position (including internal DC switch if present)</li> <li>• Check AC and DC power supply. If DC power is greater than 10W and string voltage greater than 100V the inverter should start.</li> <li>• If switches are on and AC and DC power supplies are available, please contact installer.</li> </ul>

### 10.2 Internal component fault

Error type	Display message	Error code	Error description	Action
Over BUS DC voltage	OV-BUS	1021	Internal fault	<ol style="list-style-type: none"> <li>1. Restart inverter (up to three times).</li> <li>2. If error persists contact installer for replacement inverter.</li> </ol>
Under BUS DC voltage	UN_BUS	1012	Internal fault	
BUS pressure fault	UNB2_BUS	1024	Internal fault	
System initial fault	INI-PRO	1031	Internal fault	
Relay fault	Relay_PRO	1035	Internal fault	
DSP_B fault	DSP_B_PRO	1036	Internal fault	
DC injection	DCInj_PRO	1037	Internal fault	
12V under voltage fault	12Power_PRO	1038	Internal fault	

### 10.3 Grid errors

Error type	Display message	Error code	Error description	Action
Over voltage	OV-G-V	1010	Grid voltage exceeds the standard set in the inverter	<ol style="list-style-type: none"> <li>1. Wait to see if the grid voltage returns within limits.</li> <li>2. If problem persists, check whether the grid standard is set correctly in Advanced Settings (see 6.6).</li> <li>3. Check V_AC, grid voltage, in Information display of inverter (see 6.3) and perform independent measurement of grid voltage to confirm that the inverter reading is correct. If the measured voltage is outside the local grid standard limits, please contact your local utility as it may require monitoring and adjustment</li> <li>4. With agreement from utility it is possible to set a user defined voltage range (see 6.6).</li> </ol>
Under voltage	UN-G-V	1011	Grid voltage is below the standard set in the inverter	
Over frequency	OV-G-F	1012	Grid frequency exceeds the standard set in the inverter.	<ol style="list-style-type: none"> <li>1. Wait to see if the grid frequency returns within limits.</li> <li>2. If a problem persists, check whether the grid standard is set correct in Advanced Settings (see 6.6).</li> <li>3. Check grid frequency, in Information display of inverter (see 6.3) and perform independent measurement of grid frequency to confirm that the inverter reading is correct. If the measured frequency is outside the local grid standard limits, please contact your local utility as it may require monitoring and adjustment.</li> <li>4. With agreement from utility it is possible to set a user defined frequency range (see 6.6).</li> </ol>
Under frequency	UN-G-V	1013	Grid frequency is below the standard set in the inverter.	
Grid impedance	G-IMP	1014	High grid impedance	<ol style="list-style-type: none"> <li>1. Wait to see if the grid returns within limits.</li> <li>2. If problem persists please contact your local utility as it may require monitoring and adjustment.</li> </ol>
No Grid	NO Grid	1015	The inverter cannot detect a grid.	<ol style="list-style-type: none"> <li>1. Check your AC power connections and switches.</li> <li>2. Restart the inverter.</li> <li>3. Call your local grid to resolve the black out.</li> </ol>



## 10.4 System and design fault

Error type	Display message	Error code	Error description	Action
Over DC voltage	OV-DC	1020	The DC input of the solar strings exceeds the inverters limits.	<ol style="list-style-type: none"> <li>1. Restart inverter (up to three times).</li> <li>2. Contact installer to:                             <ol style="list-style-type: none"> <li>a. Perform independent measurement of string voltage to confirm that the inverter reading is correct.</li> </ol> </li> <li>3. Rewire strings so that string voltage is within accepted range.</li> </ol>
Over temperature	TEM-PRO	1032	The internal temperature of inverter exceeds limits.	<ol style="list-style-type: none"> <li>1. Check location of inverter. Ensure it has adequate ventilation and is not exposed to direct sunlight.</li> <li>2. Contact installer to replace inverter in case problem persists.</li> </ol>
Short circuit fault	SHORT-PRO	1030	A short circuit has been detected in the system.	<ol style="list-style-type: none"> <li>1. Restart inverter (up to three times).</li> <li>2. Call installer to:                             <ol style="list-style-type: none"> <li>a. Check for pinched, crimped or otherwise damaged cables and connections.</li> <li>b. Check all switches for short circuit.</li> </ol> </li> <li>3. If error persists contact Autarco for replacement inverter.</li> </ol>
Ground fault	GROUND-PRO	1033	Current flow detected through ground conductor.	<ol style="list-style-type: none"> <li>1. Restart inverter (up to three times).</li> <li>2. Call installer to:                             <ol style="list-style-type: none"> <li>a. Check if there is any current on the ground conductor using a clamp meter.</li> <li>b. Check for pinched, crimped or otherwise damaged cables and connections.</li> </ol> </li> <li>3. If error persists contact Autarco for replacement inverter.</li> </ol>
Current leakage	ILeak_PRO	1034	A current leak has been detected.	<ol style="list-style-type: none"> <li>1. Restart inverter (up to three times).</li> <li>2. Call installer to:                             <ol style="list-style-type: none"> <li>a. Check if there is any current on the ground conductor using a clamp meter.</li> <li>b. Check for pinched, crimped or otherwise damaged cables and connections.</li> </ol> </li> <li>3. If error persists contact Autarco for replacement inverter.</li> </ol>

## 11. Product specifications

	S2.XLX20000(S)	S2.XLX25000(S)	S2.XLX30000(S)
<b>Input</b>			
Max. DC voltage (V)	1000	1000	1000
MPPT voltage range (V)	200-800	200-800	200-800
Turn on voltage (V)	350	350	350
Turn off voltage (V)	180	180	180
# MPPT	4	4	4
Max. DC current per MPPT (A)	18	18	18
# Strings per MPPT	2	2	2
Total number of strings	8	8	8
DC connection type	MC4	MC4	MC4
<b>Output</b>			
Nominal AC power (W)	20000	25000	30000
Max. AC power (W)	22000	27500	33000
Nominal AC current (A)	28.7	36.1	43.3
Max. AC current (A)	31.57	39.71	47.63
Power connection	Three phase		
Grid voltage range	According to VDE4105, UL-1741, G59/3, AS4777		
Grid frequency range	According to VDE4105, UL-1741, G59/3, AS4777		
Power factor	>0.99		
Harmonic distortion at nominal output	<3%		
AC connector	Terminal connectors		
Overvoltage category	OVC III (MAINS), OVC II (PV)		
<b>Power consumption</b>			
Nighttime power consumption (W)	< 1		
Standby power consumption (W)	< 30		
<b>Efficiencies</b>			
Max. efficiency	98.4%		
Euro efficiency	97.6%		
MPPT efficiency	99.9%		

	S2.XLX20000(S)	S2.XLX25000(S)	S2.XLX30000(S)
<b>Safety protection</b>			
DC reverse-polarity protection		Yes	
Short circuit protection		Yes	
Output over current protection		Yes	
Output over voltage protection		Yes	
Insulation resistant monitoring		Yes	
Residual current detection		Yes	
Surge protection		Yes	
Grid monitoring		Yes	
Islanding protection		Yes	
Temperature protection		Yes	
Integrated DC switch		Optional	
<b>General data</b>			
Dimensions (W x H x D) (mm)		530 X 688 X 356.5	
Weight	50kg	53kg	53kg
Installation environment		Indoor or outdoor	
Mounting		Wall bracket	
Operating temperature range (°C)		-25 to 60	
Max. relative humidity		95% (without condensation)	
Maximum altitude		2000m	
IP protection rating		IP65	
Isolation type		Transformerless	
Cooling concept		Convection	
Noise level (dB)		< 50	
LED indicators		3	
LCD display		7" LCD color screen	
Communication interfaces	4 pins RS485 connector 2 RJ45 connector 2 group of terminal block		
Optional interfaces	Wi-Fi, GPRS, Z-Wave, LAN		
Standard warranty		10 years	
Integrated DC switch		Optional	